Sliding Door Products Passive Handle Installation Instructions

MARVIN Windows and Doors
Made for you.®

Parts included:

Interior escutcheon plate
Exterior escutcheon plate with gaskets
Interior handle
Exterior handle
(2) Offset brackets
(2) #10 x 2″ Phillips head machine screws
(6) 7/16″ Button head machine screws
1/8″ Hex wrench

1. Attach exterior handle to the exterior escutcheon with two 7/16″ button head screws and tighten with wrench provided. Attach offset brackets to exterior escutcheon as shown with 7/16″ screws and tighten with wrench provided. The smaller side of the bracket should be pointing away from the handle and toward the edge of the door. See illustration.
2. Attach interior handle to the interior escutcheon with two 7/16″ screws and tighten with wrench provided. See illustration.
3. Place exterior escutcheon and handle assembly and interior escutcheon and handle assembly on passive panel as shown in illustration (Note the rout in the passive panel accepts the offset brackets.) Attach assemblies to the panel with the #10 x 2″ screws and tighten with Phillips screwdriver. See illustration.

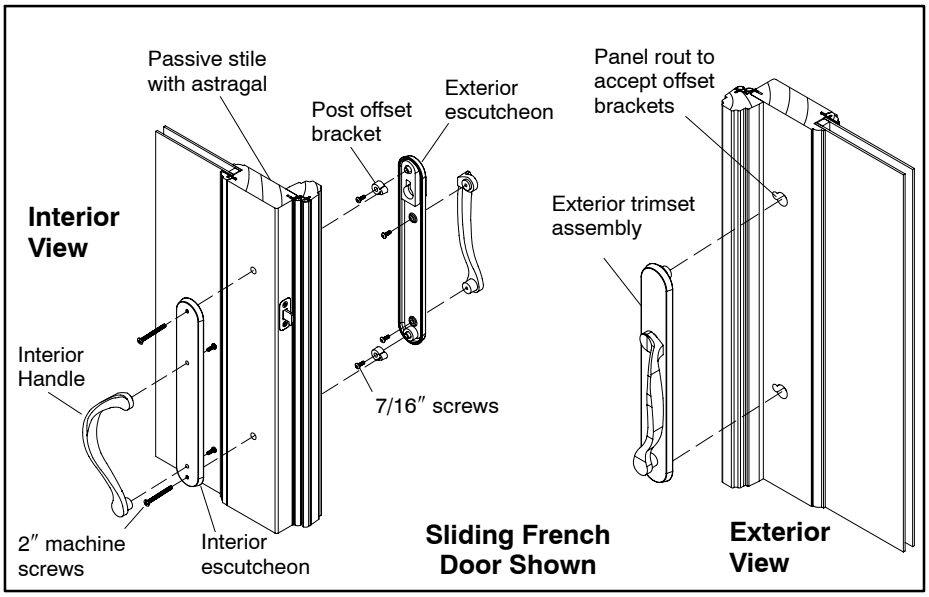

19970010
03/27/06

Sliding Door Products Passive Handle Installation Instructions

MARVIN Windows and Doors
Made for you.®

Parts included:

Interior escutcheon plate
Exterior escutcheon plate with gaskets
Interior handle
Exterior handle
(2) Offset brackets
(2) #10 x 2″ Phillips head machine screws
(6) 7/16″ Button head machine screws
1/8″ Hex wrench

1. Attach exterior handle to the exterior escutcheon with two 7/16″ button head screws and tighten with wrench provided. Attach offset brackets to exterior escutcheon as shown with 7/16″ screws and tighten with wrench provided. The smaller side of the bracket should be pointing away from the handle and toward the edge of the door. See illustration.
2. Attach interior handle to the interior escutcheon with two 7/16″ screws and tighten with wrench provided. See illustration.
3. Place exterior escutcheon and handle assembly and interior escutcheon and handle assembly on passive panel as shown in illustration (Note the rout in the passive panel accepts the offset brackets.) Attach assemblies to the panel with the #10 x 2″ screws and tighten with Phillips screwdriver. See illustration.

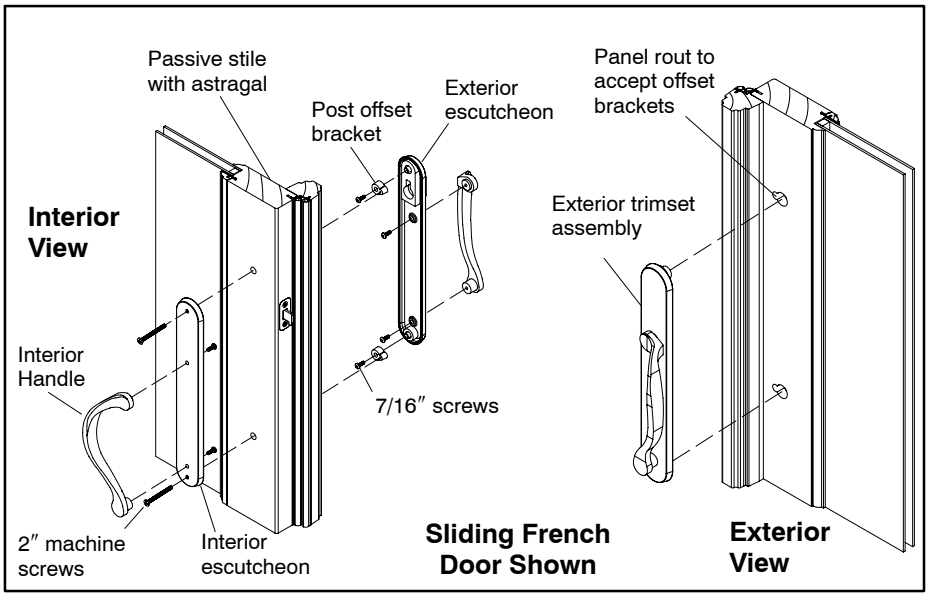

19970010
03/27/06